


# *Security Command*<sup>®</sup>

EXECUTIVE SERIES

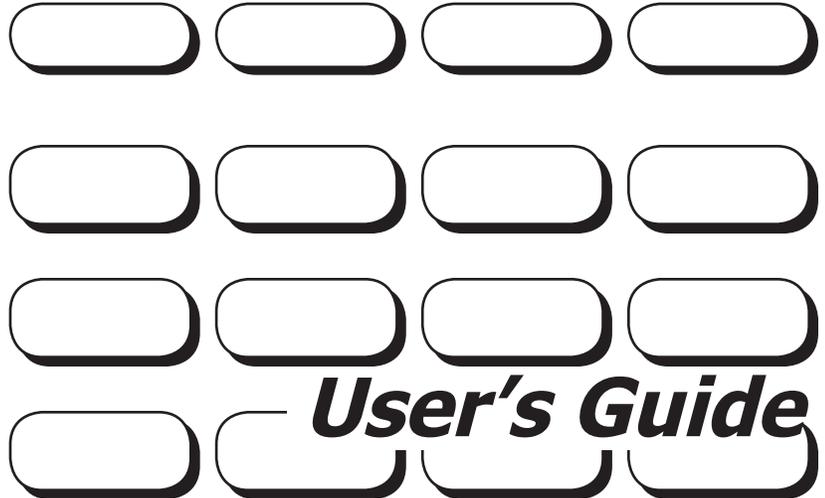

***User's Guide***

## Silencing an Alarm

When the alarm bell or siren is sounding, enter your user code or present your card to a keypad or reader during the Status List display.

### **All/Perimeter or Home/Sleep/Away System**

CANCEL VERIFY displays.

- If a burglar alarm is valid, press VERIFY to send a verification message to the Central Station.
- If a valid alarm has not occurred, press CANCEL to cancel the alarm and send an Abort or Cancel message to the Central Station. The keypad displays ALARM CANCELLED and the security system will be disarmed.

### **What to do when a trouble tone is sounding**

You can silence the trouble tone by pressing any key. This only silences the keypad and does not correct the condition that originally caused the problem.

© 2008 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.

This information is subject to change without notice.

The XRSuper6 panel is UL listed for Standard Line Security Household Service and Commercial Burglary Service.

# Security Command™ User's Guide for XRSuper6 Command Processor™ Panels Table of Contents

<i>Section</i>	<i>Page</i>	<i>Section</i>	<i>Page</i>
<b>Silencing an Alarm.....</b>	<b>Inside Front Cover</b>	Keypad Shortcut Keys.....	16
<b>Introduction .....</b>	<b>1</b>	<b>User Menu .....</b>	<b>18</b>
About Your Security System .....	1	Accessing the User Menu .....	18
Emergency Evacuation Plans .....	2	User Menu Options.....	18
DMP Keypads.....	3	User Check-in.....	19
Keypad User Options .....	6	Zone Activity Check .....	19
Special Keypad Tones .....	6	Sensor Reset.....	20
DMP Wireless .....	7	Outputs On Off .....	20
Special Wireless Displays .....	8	Bypass Zones.....	21
Special Keypad Displays.....	8	Zone Monitor .....	21
Understanding Security System Terms .....	9	Using the Zone Monitor Function .....	22
<b>Arming and Disarming.....</b>	<b>11</b>	System Test.....	22
How Your System Operates.....	11	User Codes .....	23
Arming Functions .....	11	Ambush Code .....	25
Key Fob Arming.....	12	Date and Time .....	26
Key Fob Disarming .....	12	Display Events .....	26
All/Perimeter System Arming.....	12	Request Service ?.....	26
All/Perimeter System Disarming.....	13		
Home/Away System Arming .....	14		
Home/Away System Disarming.....	15		

<i>Section</i>	<i>Page</i>	<i>Section</i>	<i>Page</i>
<b>System Setup .....</b>	<b>27</b>	<b>Appendix D .....</b>	<b>36</b>
System Setup Record.....	27	FA113 User's Guide .....	36
Outputs .....	27	Pager Direct™ User's Guide.....	36
Key Fob Button Programming .....	28	PhoneAccess™ User's Guide.....	37
User Codes .....	28	Common Keypad Displays .....	38
<b>Appendix A .....</b>	<b>30</b>	<b>Index .....</b>	<b>39</b>
About the Display Events Section.....	30	<b>Quick Reference Wallet Cards.....</b>	<b>41</b>
Zone Activity Check Event Displays .....	30		
Zone Bypass Event Displays .....	30		
Zone Event Displays .....	31		
Arming and Disarming Event Displays .....	31		
User Code Change Event Displays .....	31		
User Check-in Event Displays .....	32		
Supervisory Event Displays .....	32		
System Monitor Event Displays.....	32		
Wireless Jamming Event Displays .....	32		
Wireless Trouble Event Displays.....	32		
<b>Appendix B .....</b>	<b>33</b>		
DMP Wireless Description .....	33		
<b>Appendix C .....</b>	<b>34</b>		
Easy Entry™ User's Guide .....	34		

# Introduction

## About Your Security System

Your system is designed with your safety and comfort in mind. It uses the latest in computer technology to create the most advanced, user friendly, security, fire, and access control system available.

The system combines ease of use with a simple to understand keypad display to offer the full range of features requested by today's security system owners. Your security system can protect both the interior and perimeter of your home or business while you are away or just the perimeter when you are inside, giving you a wall of security and peace of mind.

You can turn portions of your protection on or off at any time by pressing a few keys. You can add, delete, and change personal user codes at any time or check the status of all protection devices in the system.

## DMP Keypads

This is the device we have placed at certain locations throughout the premises that allows you to turn the system protection on and off using your personal user code.

## Keypad User Menu

The keypad provides a simple User Menu containing all of the functions you need to fully operate your system such as changing the time of day or a personal user code.

## A Note About False Alarms

One of the most important concerns facing the security industry today is false alarms. The accidental dispatching of police and fire agencies places others in jeopardy by limiting the response capability of those emergency service units.

As part of our commitment to reducing false alarms, we would like to encourage you to read this guide thoroughly. All the information contained here can help you quickly, and comfortably, learn the Security Command™ system operation.

**Note:** There may be a 30-second alarm communication delay pre-programmed at installation to allow disarming if a false alarm occurs. This delay is optional and can be removed or increased to 45 seconds by your alarm dealer.

## Test Your System Weekly

It is recommended that you test the burglary portion of your system at least once each week. Testing should involve an active test of all doors, windows, and motion detectors connected to your system. If your system also has fire protection, call the service department to find out how this portion of your system should be tested.

Refer to the System Test section of this guide for instructions on testing the burglary portion of your system.

## Emergency Evacuation Plans

### Overview

The National Fire Protection Association recommends that you establish an emergency evacuation plan to safeguard lives in the event of a fire or other emergency.

### Draw a floor plan of your home or business

On a clean sheet of paper, draw the walls, windows, doors, and stairs. Also draw any obstacles that a person may encounter while exiting the building such as large furniture or appliances.

### Develop escape routes

Determine at least two routes the occupants in each room can take to safely escape. One route can be the most obvious such as the door. Another can be through an easily opened window. If the window is high off the ground, an escape ladder should be provided.

Draw arrows on the floor plan to show escape routes from each room.

### Decide where to meet

Prefarrange a meeting place outside and away from where emergency personnel are likely to be working. A neighbor's house or across the street in front of the house are good locations. Always perform a head count to make sure all occupants safely exited. NEVER ENTER A BURNING BUILDING. If the head count shows one or more persons missing, give this information immediately to the authorities. Never enter a building to look for someone.

## Practice your escape plans

Devising an escape plan is only the beginning. For the plan to be effective everyone should practice escape routes from each room.

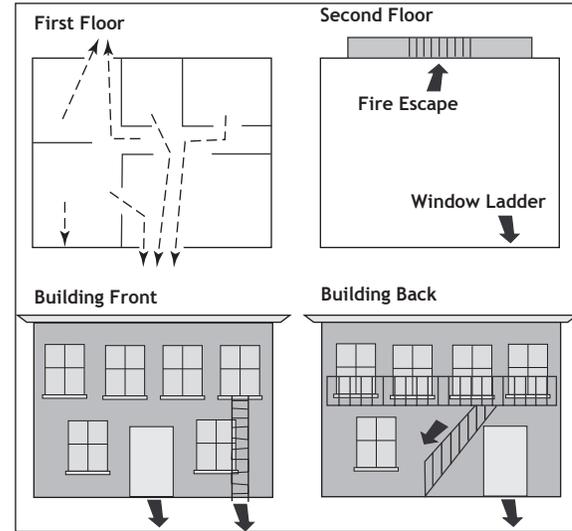


Figure 1: Sample Escape Route Map

### Early detection

The best way to survive a fire or other emergency is to get out early. A fire alarm system installation, with smoke and carbon monoxide detectors in each room, can greatly decrease your risk of loss or injury.

## DMP Keypads

Your system may have one or more easy to use LCD keypads that allow you to properly operate the system.

- Security Command™ Keypads
- Thinline™ or Aqualite™ Keypads
- Clear Touch™ Keypads

## Security Command™, Thinline™, Aqualite™ Keypads The Select keys

There are four keys under the display called the Select keys. These keys are one of the features that make your system so easy to operate. They allow you to make selections by pressing the Select key under a choice shown in the display.

**Note:** For the purposes of this guide, when instructed to press the first Select key, press the far left Select key; the second Select key is the second from the left; third Select key is second from the right; and the fourth Select key is the far right key.


## POWER LED

This LED indicates the panel Power status. It is recommended you contact the service department when the Power LED is off or blinks.


LED Operation	AC	Battery
ON (Steady)	OK	OK
OFF	Trouble	N/A
BLINKS	OK	Trouble

## ARMED LED

This LED is ON steady anytime a burglary protection area is armed and is OFF when ALL areas are disarmed.

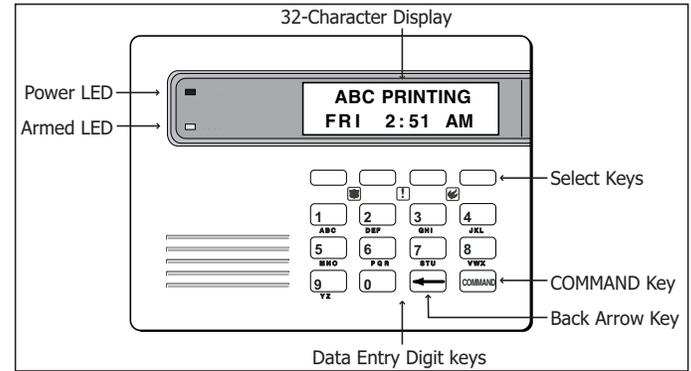


Security Command™ Keypad

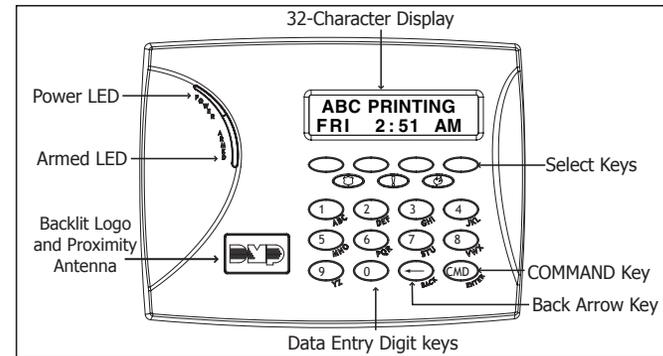


Thinline™/Aqualite™ Keypad

## Clear Touch™ Keypads

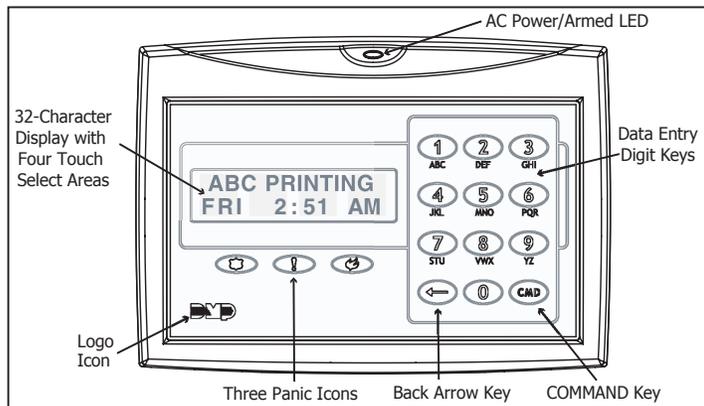

### Clear Touch™ Keypad

**Clear Touch™ Select Areas** — There are four Select Areas in the display. These Select Areas are one of the features that make your system so easy to operate. They allow you to make selections by touching the area to choose the item in the display.

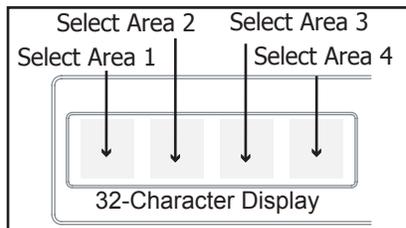

Touch Select Areas

**Note:** For the purposes of this guide when using Clear Touch™ Keypads, when instructed to press the first Select area, touch Select Area 1; the second Select area touch Select Area 2; third Select area touch Select Area 3; and the fourth Select area touch Select Area 4.

### AC Power/Armed LED

The LED indicates the Power and Armed status of the panel. Depending on the operation, the LED displays in Red or Blue as listed in the table.

Color and Activity	LED Operation
Blue Steady	Panel Disarmed, AC Power OK, Battery OK
Blue Blinking	Panel Disarmed, AC Power OK, Battery Fault
No Light	Panel Disarmed, AC Power Fault, Battery OK
Red Steady	Panel Armed, AC Power OK, Battery OK
Red/Blue Alternate	Panel Armed, AC Power OK, Battery Fault
Red Blinking	Panel Armed, AC Power Fault, Battery OK

### Common Keys on All Keypads

#### Data Entry Digit keys

These keys allow you to enter your user code when arming or disarming or enter other information into the system.

#### COMMAND (CMD) key

The COMMAND key allows you to advance through the keypad displays, User Menu, or complete a data entry function.

#### Back Arrow (←) key


The Back Arrow (←) key is used to go back through the keypad displays while operating your system. You can press the Back Arrow key to back up through the list of functions in the User Menu or to erase the last character you entered.

## Panic Functions


Your keypad may be set up to send a Panic, Emergency, or Fire report to the central station. This function is optional. If this option is programmed for your keypad, icons display below the top row Select keys/areas.

### Security Command™, Thinline™, Aqualite™ Keypads

Press and hold the two Select keys adjacent to the desired icon for 2 seconds, until a beep from the keypad is heard.

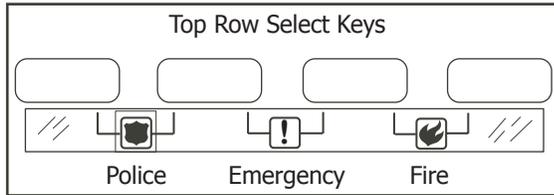


Security Command™ Keypad Panic Keys

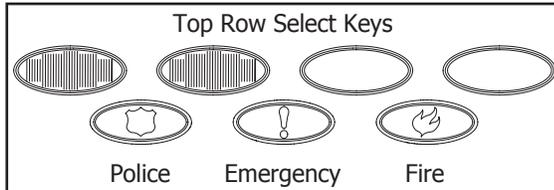

Thinline™/Aqualite™ Keypad Panic Keys

### Clear Touch™ Keypads

Touch the icon for 2 seconds until a beep is heard.

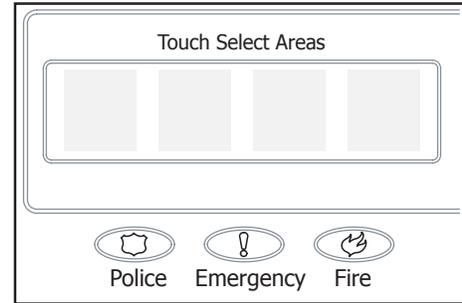

Clear Touch™ Keypad Panic Icons

### Security Command™, Thinline™, Aqualite™ Keypads 7/0 Panic Function

Security Command™, Thinline™, and Aqualite™ Keypads may also be programmed at installation to allow the user to initiate an optional Panic alarm by simultaneously pressing and holding the 7 and 0 (zero) keys. When the 7 and 0 keys are pressed for a short time, the keypad sends a Panic alarm report to the central station.

**Note:** The 7/0 Panic Function is not available on Clear Touch™ keypads.

## Keypad User Options

The User Options allow you to make adjustments to your keypad to best fit your environment and needs.

**On Security Command™, Thinline™, or Aqualite™ keypads** to access the User Options portion of the keypad, press and hold the Back Arrow and COMMAND keys for two seconds. The keypad display changes to SET BRIGHTNESS. Press the COMMAND key to display the next option or the Back Arrow key to exit.

**On Clear Touch™ keypads** to access User Options, touch and hold the center of the logo icon for two seconds. The display changes to SET BRIGHTNESS. Touch the COMMAND (CMD) key to display the next option or touch the Back Arrow (←) to exit the User Options function.

### Backlighting Brightness

At the SET BRIGHTNESS display, use the left Select key to lower the keypad brightness. Use the right Select key to increase the brightness.

**Note:** If the brightness level is lowered, it temporarily reverts back to maximum intensity whenever a key is pressed.

**On Security Command™, Thinline™, or Aqualite™ keypads** this sets the LCD display, AC LED, and the Green keyboard backlighting brightness level.

**On Clear Touch™ keypads** the user selected brightness may be set to off which allows the glass graphic display to turn off (clear glass). Simply touch the glass anywhere and the backlight illuminates for data entry. When the speaker is sounding, the backlight illuminates at one-half (1/2) brightness.

## Internal Speaker Tone

Set the tone of the keypad internal speaker. At the SET TONE display, use the top left Select key to make the tone lower. Use the right Select key to make the tone higher.

### Volume level

Set the volume level of the keypad internal speaker for key presses. During alarm, trouble, and prewarn conditions, the volume is always at maximum level. At SET VOLUME LEVEL, use the left Select key to lower the keypad volume. Use the right Select key to raise the volume.

### Model Number

The keypad model number, firmware version, and date display, but cannot be changed.

### Keypad Address

The current address assigned to the keypad displays, but cannot be changed. Press the Back Arrow key to exit the User Options function.

## Special Keypad Tones

Your keypad also contains a small speaker that alerts you about events as they occur on your system. For burglary alarms, your system may be pre-programmed at installation to stop the tone as the first digit key is pressed when entering a user code. If a valid user code is not entered within 5 seconds or an invalid user code is entered, the tone begins sounding again. Below are brief descriptions of the different tones you hear from the keypad.

**Fire alert:** An intermittent sweeping siren from LCD keypads only that continuously repeats until the fire alarm is silenced. This is in addition to the bell output from the alarm panel.

**Burglary alert:** A siren tone from LCD keypads only that continues until the alarm is silenced. This is in addition to the bell output from the alarm panel.

**Key press tone:** A short beep as you press a key on the keypad.

**Prewarn tone:** A continuous pulsed tone that sounds when you open an entry delay door on a system that is armed (turned on) reminding you to disarm the burglary protection.

Your system may be pre-programmed at installation to silence the tone as soon as the first user code digit key is pressed. If a valid user code is not entered within 5 seconds or an invalid user code is entered, the prewarn tone begins sounding again.

**Exit tone:** Your system may be pre-programmed at installation to sound a continuous pulsing tone during the exit countdown just after arming to remind you to exit the premise. At ten seconds prior to the end of the countdown, the rate of pulsing increases.

**Monitor tone:** A pulsed tone that sounds one time for one second each time a door or window is opened while you are using the zone monitor function from the User Menu. See Zone Monitor.

**Trouble tone:** A steady tone indicating a trouble condition on your system. Press a Select key to silence the trouble tone.

**Zone Activity Check tone:** A steady tone indicating no zone activity has occurred on your system within the programmed period of time. Press any key to silence the tone.

**What to do when the trouble tone sounds**

You can silence the trouble tone by pressing any key. This only silences the keypad and does not correct the condition that originally caused the trouble.

## DMP Wireless

Your system may include DMP wireless devices such as key fob(s). There are three types of DMP wireless key fobs available:


- 4-Button Model 1145 Key Fob
- 2-Button Model 1146 Key Fob
- 1-Button Model 1147 Key Fob

The drawing shows the button layout for all three models for your reference. Each button on the key fob is programmed to perform a specific action. The button names are listed for your reference.

- TOP = the Key Fob Top button
- BTM = the Key Fob Bottom button
- LFT = the Key Fob Left button
- RGT = the Key Fob Right button

The button programming list for the key fob(s) connected to your system is located in the System Setup section of this guide. Refer to Appendix B for LED Status operation information. Specific function labels can be added to each button to indicate button operation.

For best operation, allow the LED to turn on and then turn off before pressing another button. The key fob may not complete sending the signal for the button press if another button is pressed too soon.

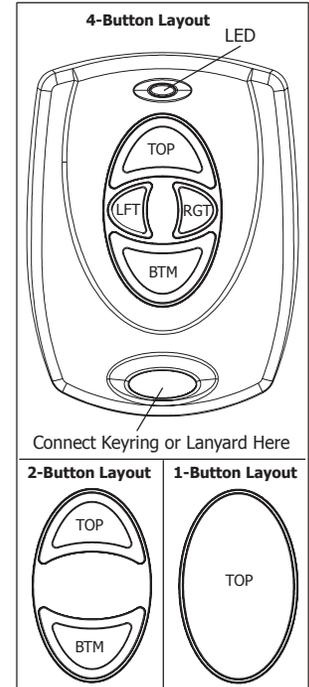

**Key Fob Examples and Button Names**

## Special Wireless Displays

Your system may use wireless transmitters to send alarm and trouble information from the protection devices to the panel. Wireless systems have a few unique keypad displays.

**BACK DOOR -LOBAT** - (Low Battery) The battery in a wireless transmitter is low. (BACK DOOR is used as an example only.)

**BACK DOOR -MISNG** - (Missing) The panel is not receiving the wireless transmitter periodic test report.

**WIRELESS -TRBL** - (Trouble) Some part of your wireless system is operating improperly. Call the service department for assistance.

**WIRELESS RECEIVER JAMMED -ALARM** - Your system may be programmed for wireless interference detection and, if displayed, your wireless receiver has detected an interfering signal while the system is armed.

**WIRELESS RECEIVER JAMMED -TRBL** - (Trouble) Your system may be programmed for wireless interference detection and, if displayed, your wireless receiver has detected an interfering signal while the system is disarmed.

## Special Keypad Displays

As you use your system, you may occasionally see a keypad display that asks you to enter a user code or describes a condition on the system. Below are some examples of the displays you may see.

### ALARM

A 24-hour zone, such as a fire or panic zone, or an armed burglary zone is faulted. Your system may sound bells or sirens.

### ALARM NOT SENT

The alarm signal was aborted and was not sent to the central station because a user code was entered to disarm the system before the alarm signal was sent to the central station. Also, your system may be pre-programmed at installation to send an Abort signal to the Central Station. Refer to the Introduction section of this guide.

### ALARM CANCELLED

An Alarm signal just sent to the central station was cancelled because a user code was entered after the alarm was sent. Also, an Alarm Cancel signal is sent to the Central Station.

### ALARM VERIFIED

A valid burglar alarm has occurred and has been manually verified by the user. The alarm system also transmits a VERIFY message to the Central Station.

### ENTER CODE

The system requires you to enter a personal user code. User codes can be used for turning your system on (arming), turning your system off (disarming), and other system options.

As you enter your user code, the keypad display shows an asterisk (\*) in place of each digit pressed. This prevents others from seeing your user code on the display as you enter it.

### TRY AGAIN

The user code you entered is not recognized by the system. Check the user code and try again.

### INVALID CODE

The user code you entered is considered invalid by the system.

## **TRBL (TROUBLE)**

There is a problem with a protection device or system component. This display is accompanied by a description of the problem.

## **SYSTEM TROUBLE or SERVICE REQUIRED**

There is an electronic failure in your system. Contact the service department as soon as possible.

## **TEST IN PROGRESS**

The system is currently being tested by an installation or service technician.

## **Understanding Security System Terms**

Throughout this guide, and in some displays on your keypad, you may see certain words or phrases that might be unfamiliar. Although every effort has been made to use terms that are commonly known, there are some for which there was no acceptable substitute.

The following terms may display on the keypad or be used in this document.

### **Arming**

This is the term used for turning on the burglary protection in one or more areas of the system. Your system may require you to enter a user code. When armed, the system can sound alarm bells or sirens and, if monitored, send alarm reports to a central station when a burglary zone is faulted.

Fire, panic, and other 24-hour devices are always turned on and do not need to be armed.

### **Disarming**

This means turning off one or more areas of the system. When disarmed, the system does NOT sound alarms or send alarm reports to a central station when a burglary zone faults.

## **Zone**

A zone refers to one or more protected openings or protection devices assigned the same zone number. Each door or window, motion detector, smoke detector, or other device has a zone number and a name.

Often, similar devices in the same general area share the same zone. For example, the windows on the east side of the premises can all be grouped together in a zone named E. WINDOWS.

## **Entry or Exit Zone**

Almost all systems have one or more doors through which you can enter or exit the premises. These doors are programmed with a delay time to allow you to enter or exit while the system is armed without setting off the alarm.

When you arm the system, activity on all burglary zones is ignored until the programmed exit delay time expires. Once that time has expired and the system is fully armed, opening the door causes the panel to start the entry delay time. During the entry delay time, enter a valid user code to disarm the system or an alarm occurs.

## **Instant Zone**

Exterior windows and non-entry doors, or interior protection devices, are typically not programmed with delay times. If these zones fault while the system is armed, an alarm occurs instantly.

## **24-Hour Zone**

A 24-hour zone is not turned on or off by arming or disarming your system. Some examples of 24-hour zones are fire zones, panic zones, and temperature control zones.

## Areas

An area is made up of burglary zones that can be armed or disarmed together. The Perimeter area, for example, consists of all the doors and windows on the outside of the building. When you arm the Perimeter, these zones sound an alarm if tripped.

## Central Station Monitoring

Your system can also be programmed to automatically send alarm, trouble, and arming and disarming reports to a central station. Operators at the central station can then dispatch the appropriate authorities or contact you with the specific event information.

## Status

Status is a feature that automatically displays the system armed or disarmed status on the keypads. Alarm or trouble conditions on a zone or a system monitor such as AC or battery trouble can also display. There are two types of status information available: **Status List** and **Armed Status**.

### Status List

The keypad Status List displays any alarm or trouble condition on a zone and any trouble condition that occurs with the AC power or battery power. If your system contains any Panic zones, these do not display on the keypad for security reasons.

If an alarm occurs on a non-fire, 24-hour zone or a system monitor, it remains in the Status List until it restores. If one or more armed burglary zones trips, the last one to trip remains in the Status List. The burglary zone alarm remains in the Status List for several minutes or until it is cleared by disarming the system.

### Armed Status

With Armed Status, the keypad displays the current armed condition of areas within your security system.

## The keypad displays

**HOME MODE ON**

**PERIMETER ON**

**ALL SYSTEM ON**

**SLEEP MODE ON**

Also, for keypads that include an Armed LED, the Armed LED is ON steady anytime a burglary protection area is armed and OFF when ALL areas are disarmed.

## Zone Status

To display the status of a particular zone, enter the zone number followed by the COMMAND key when the keypad displays the Status List.

## Exit Error

This is an automatic panel function that prevents an alarm from occurring if an exit door does not close all the way after the system is armed.

For example, if the front door is left ajar upon exit and the exit delay time expires, the system attempts to arm the front door zone but recognizes the open condition. The system sounds the alarm sirens for two seconds to alert you of the condition.

If the open condition is not corrected, the system sends an Exit Error report to the central station and force arms the door. If the door closes at a later time, it is included back into the system.

The Exit Error feature allows the central station to acknowledge the arming error without dispatching the police on a false alarm.

## When

The perimeter areas is armed in a Home/Away system.

The perimeter is armed in an All/Perimeter system.

All areas are on.

The perimeter and interior areas are on but the bedroom area is off.

# Arming and Disarming

## How Your System Operates

Your system has been programmed to operate in one of two modes: All/Perimeter or Home/Sleep/Away.

- **All/Perimeter** – Your burglary protection is divided into two areas: Interior and Perimeter.

**Perimeter** arming is for when you are staying inside but want the comfort of knowing the exterior doors and windows are armed. Perimeter arming allows you to move freely about inside without setting off any interior alarms.

**All** arms both the Perimeter and the Interior of the system. You want to arm both of these areas when leaving the building and no one is left inside.

- **Home/Sleep/Away** – Your burglary protection is divided into two or three areas: Perimeter, Interior, and Bedrooms.

**Home** (Perimeter) arming is for when you are staying inside but want the comfort of knowing the exterior doors and windows are armed.

**Sleep** (Perimeter and Interior) arms all areas except those near bedrooms and nighttime areas.

**Away** (Perimeter, Interior, and Bedrooms) arms all three areas for when you leave the building and no one is left inside.

Regardless of which mode is programmed, much of the operation is similar. Throughout this guide, any differences between the systems are noted for your convenience.

## Arming Functions

**Arming:** During arming, the system verifies that all doors, windows, and other protection devices to be armed are in normal condition. If everything is normal, the system arms. If there is a problem on one or more burglary zones, the keypad displays the problem and allows you to correct the problem or bypass those zones.

If the problem can be corrected by closing a door or window, do not bypass the zone. Instead, correct the problem and try arming again. If the problem cannot be corrected, you can bypass the zone or wait until the zone can be repaired by a service technician. A bypassed zone is ignored by the system during the armed period.

In some cases the keypad might display **FRONT DOOR - FAULT**. The keypad may then display **PRIORITY ZONE**, which is a zone that cannot be bypassed. The problem on the zone must be corrected before the system can be armed.

After making your arming selection, the keypad displays any zones that are currently bypassed. These zones remain bypassed until the system is armed and then disarmed. Any 24-hour zones in a faulted condition also display.

**Armed Message:** After completing all bypasses or correcting zone faults, the areas selected are armed.

For All/Perimeter systems the keypad briefly displays **ALL SYSTEM ON** if all areas in the system are arming or **PERIMETER ON** if only selected areas are arming.

For Home/Away or Home/Sleep/Away systems the keypad displays **ALL SYSTEM ON** if all areas in the system are arming, **HOME MODE ON** or **SLEEP MODE ON** if only selected areas are arming.

**Exit Delay:** The keypad then displays the exit delay time as it counts down. Your system may be pre-programmed at installation to beep the exit delay tone at eight-second intervals until the last 10 seconds when the keypad beeps at three-second intervals. After exiting the building, if you re-enter during the countdown the exit countdown restarts, allowing additional time to then disarm or again exit the building during the countdown. This restart can occur only one time. When the exit delay time expires, all disarmed zones are armed. If your system uses a keyswitch to arm an area, the exit delay time does NOT count down on the keypad display.

When you arm both the Perimeter and Interior to leave the building but then you do not exit by the time the exit delay ends, the system automatically arms but the interior area(s) will remain disarmed because you have not exited.

Should you exit the building and the door does not close properly, your system may be programmed so that when the exit delay countdown ends, then the entry delay starts and the bell will sound to alert you to the situation. Enter your user code to stop the bell and disarm the system. Rearm the system, exit the building, and make sure the door is securely closed.

**DIALING . . . Message:** If your system is monitored, it may be programmed to wait for the arming report to be sent to the central station before displaying the armed message. (See Arming Report below.) This verifies your phone lines are working properly. While the system waits, the display reads **DIALING....** If the report is received, the keypad buzzes for one second and displays the armed message. If the report is not received, the keypad displays **LOCAL ALARM ONLY** before displaying the armed message.

**Arming Report:** Your system may be pre-programmed at installation to send arming or zone bypass reports to a central station.

## Key Fob Arming

Press the key fob button programmed for Arming or Toggle (Arm/Disarm) button. A Red LED two-second acknowledgement indicates All System On. A Green/Red two-second acknowledgement indicates System On with some areas armed.

## Key Fob Disarming

Press the key fob button programmed for Disarming or Toggle (Arm/Disarm) button. A Green LED two-second acknowledgement indicates All System Off.

**Note:** Disarming authority needs to be enabled for the User Code assigned to the Key Fob. Refer to Adding User Codes later in this document.

## All/Perimeter System Arming

**Area Assignment:** Your security system is divided into two separate areas. Motion detectors, inside doors, and other interior protection devices are assigned to the *Interior* area while windows and exterior doors are assigned to the *Perimeter* area.

**Perimeter or All:** When arming an All/Perimeter system, the keypad displays **PERIM ALL**. If you select **ALL**, you arm both the Perimeter and the Interior of the system. You want to arm both of these areas when leaving with nobody left inside. Selecting **PERIM** arms only the Perimeter of the system. Perimeter arming is for when you are staying inside but want the comfort of knowing the exterior doors and windows are armed. Perimeter arming allows you to move freely about inside without setting off any interior alarms.

## System Ready/System Not Ready Keypad Displays

When all zones in the system are in a normal condition, the keypad displays **SYSTEM READY**. If there are one or more zones that are not in a normal condition, the keypad displays **SYSTEM NOT READY**. Pressing any Select key during this display shows the zone name allowing you to investigate the problem.

## Instant Arming

**Instant:** During the exit delay time, you can cancel the exit and entry delays and cause all zones to be instant zones. Press the far right select key under **INSTNT** while the exit delay displays. This immediately arms the exit zones. However, no entry delay is provided and an alarm immediately occurs should an entry door be opened.

## All/Perimeter Shortcut Key Arming

**Arm Perimeter** – Press 6 for 2 seconds.

**Arm All**– Press 1 for 2 seconds.

## Arming an All/Perimeter System

1. Enter your code. The keypad displays **PERIM ALL**.
2. Select **PERIM** to arm the Perimeter area only.
3. Select **ALL** to arm both the Perimeter and Interior areas.
4. The keypad displays zones that have been bypassed prior to arming and zones that are now in a faulted condition.
5. At this point you can **force arm** or **bypass** any faulted zones. A zone that is force armed is restored into the system if it later returns to normal. A bypassed zone remains bypassed until the system is disarmed. See steps 5a through 5d.
  - 5a. If a problem exists on any zones, the zone name and problem display followed by: **OKAY BYPASS STOP**.
  - 5b. Select **OKAY** to force arm the zone(s) before arming.

*Arming and Disarming*

- 5c. Select **BYPASS** to bypass the zone(s) before arming.
- 5d. Select **STOP** to stop the system from arming. Correct the zone problem(s) and return to step 1.
6. The keypad displays **PERIMETER ON** if only the perimeter is being armed and **ALL SYSTEM ON** if both the perimeter and interior are being armed.
7. The keypad next displays **EXIT: ## INSTNT** and begins to count down the number of seconds remaining for you to exit. When the delay expires, all zones are armed.
8. You can select **INSTNT** while **EXIT: ## INSTNT** displays to immediately arm all zones and make them instant. The keypad displays **INSTANT**. When you select **INSTANT**, any entry/exit zone that trips immediately activates an alarm and the exit delay countdown immediately stops.
9. When the system is fully armed, the keypad displays **PERIMETER ON** for perimeter arming and **ALL SYSTEM ON** for perimeter and interior arming.

## All/Perimeter System Disarming

**Disarming:** While the system is armed, you can only enter the premises through an entry/exit delay door without causing an alarm. After opening the door, the keypad sounds a prewarn tone to remind you to disarm the system. You must disarm the system before the prewarn tone expires or an alarm on the door zone occurs.

During the prewarn tone, the keypad displays **ENTER CODE:.** Enter your user code to disarm the system.

**Note:** Your system may be pre-programmed at installation to silence the tone as soon as the first user code digit key is pressed. If a valid user code is not entered within 5 seconds or an invalid user code is entered, the prewarn tone begins sounding again.

**Alarm Display:** After disarming, the keypad displays any zones that tripped or any transmission problems that occurred during the armed period. All burglary zones are then disarmed and any bypassed zones automatically reset.

**Disarmed Message:** The keypad displays **ALL SYSTEM OFF** after the system disarms.

**Central Station Report:** Your system may be pre-programmed at installation to send a report of the system disarming to the central station.

### **Disarming an All/Perimeter System**

1. During the entry delay time, the keypad displays **ENTER CODE:.** Enter your user code.
2. The keypad displays any zones that went into alarm and any communication problems that occurred during the armed period.
3. The keypad next displays **ALL SYSTEM OFF** to confirm the system is disarmed.

### **Disarming During an Alarm**

1. While the alarm bell or siren sounds, enter your user code to silence the alarm.

For a burglary alarm, the keypad displays **CANCEL VERIFY.**

This allows you to investigate the alarm prior to disarming the system. This display remains on the keypad until a selection is made, the Back Arrow is pressed, or the internal system bell cutoff timer expires.

2. If a valid alarm has not occurred, Select **CANCEL** to disarm the system and cancel the alarm.

The keypad displays **ALARM CANCELLED** then **ALL SYSTEM OFF** to confirm the system is disarmed.

OR

If the alarm is valid, select **VERIFY** to send a verify message to the Central Station.

## **Home/Away System Arming**

**Area Assignment:** Your security system is divided into two or three separate areas. Motion detectors, inside doors, and other interior devices are assigned to an Interior and possibly Bedroom area while windows and exterior doors, are assigned to a Perimeter area.

**Arming the system:** When arming a Home/Away system, the keypad displays **HOME AWAY** or **HOME SLEEP AWAY**. If you select **AWAY**, you arm all areas of the system. You want to arm all areas when leaving with nobody staying inside.

Selecting **HOME** arms only the system Perimeter. Perimeter arming is for when you are staying inside but want the comfort of knowing the exterior doors and windows are armed.

Selecting **SLEEP** arms the Perimeter and Interior devices but leaves devices near bedrooms and other nighttime areas off.

### **System Ready/System Not Ready Keypad Displays**

When all system zones are in a normal condition and can be armed without bypassing, the keypad displays **SYSTEM READY**. If there are one or more zones that are not in a normal condition, the keypad displays **SYSTEM NOT READY**. Pressing any Select key during this display shows the bad zone name.

## Home/Sleep/Away Shortcut Key Arming

**Arm Home** – Press 3 for 2 seconds to arm the perimeter.

**Arm Sleep** – Press 7 for 2 seconds to arm the perimeter and interior areas and leave the bedroom area off.

**Arm Away** – Press 1 for 2 seconds.

## Arming a Home/Away System

1. Enter your user code. The keypad displays **HOME AWAY** or **HOME SLEEP AWAY** (you may have three areas).
2. Select **HOME** to arm the Perimeter only.
3. Select **SLEEP** to arm the Perimeter and Interior.
4. Select **AWAY** to arm the Perimeter, Interior, and Bedroom.
5. The keypad displays zones that have been bypassed prior to arming and zones that are in a faulted condition.
6. At this point you can force arm or bypass any faulted zones. A zone that is force armed is restored into the system if it later returns to normal. A zone that is bypassed remains bypassed until the system is disarmed. See steps 6a through 6d.
  - 6a. If a problem exists on any zones, the zone name and problem display followed by: **OKAY BYPASS STOP**.
  - 6b. Select **OKAY** to force arm the zone(s) before arming.
  - 6c. Select **BYPASS** to bypass the zone(s) before arming.
  - 6d. Select **STOP** to stop the system from arming. Correct the zone problem(s) and return to step 1.
7. The keypad displays **HOME MODE ON** if you selected **HOME**, or **SLEEP MODE ON** if you selected **SLEEP**, or **ALL SYSTEM ON** if you selected **AWAY**.

8. The keypad next displays **EXIT: ## INSTNT** and begins to count down the number of seconds remaining for you to exit. When the delay expires, all zones are armed.
9. You can select **INSTNT** while **EXIT: ## INSTNT** displays to immediately arm all zones and make them instant. The keypad displays **INSTANT**. When you select **INSTANT**, any entry/exit zone that trips immediately activates an alarm and the exit delay countdown immediately stops.
10. When the system is armed, the keypad displays **HOME MODE ON** for Perimeter arming, **SLEEP MODE ON** for Perimeter and Interior arming, and **ALL SYSTEM ON** for all areas armed.

## Home/Away System Disarming

**Disarming:** While the system is armed, you can only enter the premises through an entry/exit delay door without causing an alarm. After opening the door, the keypad sounds a prewarn tone to remind you to disarm the system. You must disarm the system before the prewarn tone expires or an alarm on the door occurs.

During the prewarn tone, the keypad displays **ENTER CODE:.** Enter your code to disarm the system.

**Note:** Your system may be pre-programmed at installation to silence the tone as soon as the first user code digit key is pressed. If a valid user code is not entered within 5 seconds or an invalid user code is entered, the prewarn tone begins sounding again.

**Alarm Display:** After disarming, the keypad displays any zones that tripped or any communication problems that occurred during the armed period. All burglary zones are then disarmed and any bypassed zones automatically reset.

**Disarmed Message:** The keypad displays **ALL SYSTEM OFF** after the system disarms.

**Central Station Report:** Your system may be pre-programmed at installation to send a report of the system disarming to the central station.

### Easy Exit™ Shortcut Key

**Home/Sleep/Away Systems** – While the system is armed, press 8 for 2 seconds to restart the exit delay time allowing you to exit the premises without disarming the system. After the exit delay time expires, the system rearms automatically. This feature allows you to retrieve the paper, let your pet out, or leave for work without having to disarm and then rearm the system.

You can also press the Easy Exit, shortcut key 8 again for 2 seconds, to cancel the exit delay countdown. For example, the telephone rings before you retrieve the newspaper so you press shortcut key 8 to rearm the system.

### Disarming a Home/Away System

1. During entry delay, the keypad displays **ENTER CODE:.** Enter your user code.
2. The keypad then displays any alarms or communication problems that occurred during the armed period.
3. The keypad next displays **ALL SYSTEM OFF** to confirm the system is disarmed.

### Disarming During an Alarm

1. While the alarm bell or siren sounds, enter your user code to silence the alarm.

For a burglary alarm, the keypad displays **CANCEL VERIFY.**

This allows you to investigate the alarm prior to disarming the system. This display remains on the keypad until a selection is made, the Back Arrow is pressed, or the internal system bell cutoff timer expires.

2. If a valid alarm has not occurred, Select **CANCEL** to disarm the system and cancel the alarm.


The keypad displays **ALARM CANCELLED** then **ALL SYSTEM OFF** to confirm the system is disarmed.

OR

If the alarm is valid, select **VERIFY** to send a verify message to the Central Station.

### Keypad Shortcut Keys

Your LCD keypad provides one-button shortcut keys. Holding down the selected keypad button for two seconds until the tone re-sounds allows you to arm, monitor, or reset your system. These options can still be accessed through the User Menu if desired.

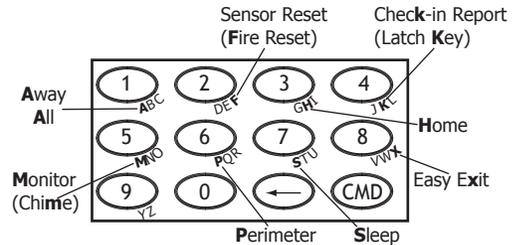

**Keypad Shortcut Keys**

### Keypad Key

Press Key 1

Press Key 2

Press Key 3

Press Key 4

Press Key 5

Press Key 6

Press Key 7

Press Key 8

### Arming System Operation

Arm Away for Home/Sleep/Away systems

Arm All for All/Perimeter systems

Sensor (Fire) Reset on all systems

Arm Home for Home/Sleep/Away systems

Check-in Report on all systems

Monitor (Chime) on all systems

Arm Perimeter for All/Perimeter systems

Arm Sleep for Home/Sleep/Away systems

Easy Exit for Home/Sleep/Away systems

## Arming Function

**System Operation:** Home/Sleep/Away, or All/Perimeter.

You can use the Arming shortcut keys, 1, 3, 6, and 7 when the system is disarmed. You may be prompted to enter your user code. If any zones are faulted, select force arm or bypass. Refer to the Arming Section for detailed arming operation.

### Home/Sleep/Away Arming

**Arm Home** – Press 3 for 2 seconds to arm the perimeter.

**Arm Sleep** – Press 7 for 2 seconds to arm the perimeter and interior areas and leave the bedroom area off.

**Arm Away** – Press 1 for 2 seconds.

### All/Perimeter Arming

**Arm Perimeter** – Press 6 for 2 seconds.

**Arm All**– Press 1 for 2 seconds.

## Sensor (Fire) Reset Function

**System Operation:** Area, Home/Sleep/Away, or All/Perimeter.

You can use the Sensor (Fire) Reset, shortcut key 2, when the system is armed or disarmed. When pressed, detectors that have latched due to an alarm condition are now restored and returned to normal function. The keypad displays SENSORS ON and SENSORS OFF to acknowledge the shortcut key press.

**Note:** You are prompted to enter your User Code on Area or All/Perimeter systems.

## Monitor (Chime) Function

**System Operation:** Area, Home/Sleep/Away, or All/Perimeter.

You can use the Monitor (Chime), shortcut key 5, when the system is disarmed. When pressed, the Zone Monitor operation is initiated. As needed, refer to the Zone Monitor section. The keypad displays **MONITOR ON** and chimes or displays **MONITOR OFF** and no tone is sounded.

**Note:** The Monitor (Chime) shortcut key applies to all Exit zones in an Area system and to all zones assigned to the perimeter in a Home/Sleep/Away or All/Perimeter system.

## Check-in Report (Latch Key) Function

**System Operation:** Area, Home/Sleep/Away, or All/Perimeter.

You can use the Check-in Report (Latch Key), shortcut key 4, to have a Check-in Report sent to your alpha or numeric pager. This Shortcut Key does not operate if a pager is not programmed. Refer to Appendix D for Pager Direct™ information.

## Easy Exit™ Function

**System Operation:** Home/Sleep/Away.

You can use the Easy Exit, shortcut key 8, when the system is armed, to restart the exit delay allowing you to exit the premises without disarming the system. For example, to let a pet out or retrieve the newspaper. After the exit delay time expires, the system automatically rearms.

You can also press the Easy Exit, shortcut key 8 again, to cancel the exit delay countdown. For example, the telephone rings before you retrieve the newspaper so you press shortcut key 8 to rearm the system.

# User Menu

Many of your system features have been put into a User Menu that you can access from any Security Command™ keypad. The menu requires you to enter your user code. Only those functions to which you have access display.

## Accessing the User Menu

1. Press the COMMAND key until MENU? NO YES displays.
2. Select YES. The keypad displays ENTER CODE: — . Enter your user code and press COMMAND. You can now scroll down through the list of system features available to you.

## User Menu Options

The following list shows the User Menu options in order:

<b>Menu Option</b>	<b>Description</b>
<b>USER CHECKIN</b>	Allows check-in with the system to indicate arrival on premises.
<b>ZONE ACTIVITY CHECK</b>	Allows you to monitor a zone for non-activity.
<b>SENSOR RESET</b>	Resets smoke or glassbreak detectors that have latched during an alarm condition.
<b>OUTPUTS ON/OFF</b>	Allows you to turn on or off any of the outputs described in the System Setup section of this guide.
<b>BYPASS ZONES</b>	Allows you to Bypass a zone or reset an already bypassed zone.

<b>ZONE MONITOR</b>	Allows you to add or remove a zone from the monitor mode.
<b>SYSTEM TEST</b>	Tests the system siren, communication to the central station, and backup battery.
<b>USER CODES</b>	Allows you to add, delete, or change user codes and authority levels.
<b>DATE AND TIME</b>	Allows you change the Day, Date, or Time that is currently in the system.
<b>DISPLAY EVENTS</b>	Allows you to view the last 60 system events that occurred on your system.
<b>SERVICE REQUEST</b>	Allows you to send a message to the Central Station requesting service on the alarm system.

The following pages detail each User Menu item and provide instructions on when and how to use them properly

## User Check-in

**User Code Level:** Master or Standard

**Function:** This feature allows you to monitor the arrival of children from school or employees to work by having a special Check-in Report sent to your alpha or numeric pager if programmed.

Appendix D describes the Pager Direct™ option. The last page of this guide contains a Quick Reference card for your wallet or purse.

### Sending a Check-in Report

1. After disarming the system, access the User Menu.
2. At the **USER CHECKIN?** display, press any Select key. The keypad displays **USER CHECKIN: 12** (12 = user number).
3. The panel sends the Check-in Report containing your account number and user number to the pager.

### Check-in (Latch Key) Report Shortcut Key

**All Systems** — Press 4 for 2 seconds, then enter your user code to send a Check-in Report.

**Note:** Shortcut Key 4 does not operate if a pager is not programmed.

## Zone Activity Check

**User Code Level:** Master or Standard

**Function:** Your security system may be pre-programmed at installation for the Zone Activity Check feature allowing you to monitor a person for non-activity.

When no activity is detected for the programmed time period, your keypad sounds a steady tone for a set period of time and displays **PRESS ANY KEY**. Pressing any key on the keypad, before the steady tone stops, prevents your system from sending a “User Activity Not Detected” report to the central station. Pressing the key also restarts the zone activity timer.

This could be used for a person living alone to detect when they have not tripped a disarmed zone within a programmed period of time.

### Selecting Zone Activity Check

1. At the **ACTIVITY CHECK?** display, press any Select key. The keypad displays **ENABLE? YES NO**. The default is **YES**.
2. When **NO** is selected, the keypad displays **CHECK DISABLED** for four seconds and then sends the Activity Check Disabled message to the central station.
3. When **YES** is selected, the keypad displays **CHECK ENABLED** for four seconds and then sends the Activity Check Enabled message to the central station.

## Sensor Reset

**User Code Level:** Master or Standard

**Function:** Resets smoke or glassbreak detectors. Also clears Fire and Supervisory zone alarms and trouble keypad displays. Sensor Reset also clears low battery displays if your system is using wireless sensors.

Once smoke or glassbreak detectors trip, they must be reset before they can detect any additional alarm conditions. When Sensor Reset is selected, power to the detectors is temporarily removed by the system allowing them to reset.

Make sure all smoke is cleared from around the area of the smoke detectors before performing a Sensor Reset to prevent the alarm from occurring again.

### Resetting the Sensors

1. Access the User Menu.
2. When **SENSOR RESET?** displays, press any Select key. The keypad displays **SENSORS OFF** for five seconds followed by **SENSORS ON**.
3. The keypad returns to the status display.

### Sensor (Fire) Reset Shortcut Key

**All Systems** — Press 2 for 2 seconds, then enter your user code if required, to reset the system.

## Outputs On Off

**User Code Level:** Master or Standard.

**Function:** Allows you to turn the system outputs on and off.

This function is used to individually turn your system relay outputs on and off. Your system may use these outputs to control interior and exterior lighting, or heating, air conditioning, or other appliances.

The system output names and numbers are located in the System Setup section at the back of this guide.

### Turning the Outputs On and Off

1. Access the User Menu.
2. Press the **COMMAND** key until **OUTPUTS ON/OFF?** displays.
3. Press any Select key.
4. The keypad displays **OUTPUT: - ON OFF**.
5. Enter the output number you want to turn on or off. The output number appears in the display.
6. With the output number displayed, Select **ON** or **OFF**. The output is then turned on or off, depending on your selection, and remains in that state until you change it.
7. The system automatically removes the output number and a new output number can be entered. Refer back to step 5.

To exit the Output menu option, press the Back Arrow key until you return to the keypad Status List.

## Bypass Zones

**User Code Level:** Master or Standard.

**Function:** Allows you to bypass a zone prior to arming the system.

Bypassing is usually done when a zone cannot be restored to normal and you want to arm the system. Once bypassed, the system does not respond to any activity on the zone.

A zone can be bypassed only while it is disarmed. Since Fire, Panic, Emergency, and Supervisory zones are always armed, they can never be bypassed.

The Bypass Zones function can also be used to restore a bypassed zone back into the system. This can only be done while the zone is disarmed.

Your system may be pre-programmed at installation to send a bypass report to your central station when Bypass Zones is selected.

### Using the Bypass Zones Function

1. Access the User Menu.
2. Press the COMMAND key until **BYPASS ZONES?** displays.
3. Press any Select key. The keypad displays **ZONE - RST BYPS.**
4. To reset a zone, enter the zone number and Select **RST.**
5. To Bypass a zone, enter the zone number and Select **BYPS.**

## Zone Monitor

**User Code Level:** Master and Standard.

**Function:** Allows the system to monitor selected disarmed zones (doors, windows, or motion detectors). When a monitored zone trips, the keypad sounds a tone and displays the zone name. This is an ideal feature for monitoring door zones to tell when someone comes in or goes out and for system testing.

You can place any combination of disarmed zones in Zone Monitor but only the most recently tripped zone displays. The displayed zone name clears automatically after a short time or when the zone is armed. Zone Monitor does not function while the system is armed but a zone placed into the Zone Monitor is still monitored when the system is disarmed.

**Using Zone Monitor as part of your weekly system test:** After using the System Test function, place all zones in Zone Monitor. Starting at the front door, walk around and open and then close each door and window. You should hear the keypad beep each time. The keypad also displays the name of each zone as its device is opened.

Once all protected doors and windows are tested, walk in front of each motion detector and trip any other protection devices on the system. The keypad should beep to confirm their operation. If at any time during your weekly testing a device does not cause the keypad to beep, call the service department for assistance.

### Monitor (Chime) Shortcut Key

**All Systems** — Press 5 for 2 seconds when the system is disarmed. This initiates the Zone Monitor operation for all Exit zones in an Area system or all zones assigned to the perimeter in a Home/Sleep/Away or All/Perimeter system. The keypad displays MONITOR ON and chimes or displays MONITOR OFF and no tone is sounded.

## Using the Zone Monitor Function

1. Access the User Menu.
2. Press the COMMAND key until **ZONE MONITOR?** displays.
3. Press any Select key.  
The keypad displays **PERIM ALL NBR**.
4. Select **PERIM** to place all disarmed perimeter zones into Zone Monitor.
  - 4a. The keypad displays **PERIM? ADD RMV**.
  - 4b. Select **ADD** to add all perimeter zones to Zone Monitor.
  - 4c. Select **RMV** to remove all perimeter zones.
5. Select **ALL** to place all disarmed zones into Zone Monitor.
  - 5a. The keypad displays **ALL? ADD RMV**.
  - 5b. Select **ADD** to add all disarmed zones to Zone Monitor.
  - 5c. Select **RMV** to remove all disarmed zones.
6. Select **NBR** to enter a specific zone number for zone monitor.
7. If **NBR** is selected, the keypad displays **ZONE : - ADD RMV**.
  - 7a. Enter any zone number and select **ADD** to add this zone.
  - 7b. Enter any zone number and select **RMV** to remove the zone.
8. The zone number automatically disappears and a new zone number can then be entered. See step 7.

## System Test

**User Code Level:** Master or Standard.

**Function:** System Test is used to test the battery, alarm bell or siren, and central station communication. The System Test function begins automatically as soon as you select it.

### Using the System Test Function

1. Access the User Menu.
2. Press the COMMAND key until **SYSTEM TEST?** displays.
3. Press any Select key. The system test begins automatically and the keypad displays:
  - 1) **BELL SOUNDING** during a two second bell test, then:
  - 2) **BATTERY - OKAY** or **BATTERY - TRBL** to indicate the battery condition, then:
  - 3) **TRANSMIT TEST \*** and **ATTEMPT NO : 1** during the transmit test, then:
  - 4) **TRANSMIT OKAY** or **TRANSMIT FAILED** to show the transmit test results, then:
  - 5) **TEST END** to indicate the System Test is complete.
  - 6) Press the Back Arrow key to end the system test.  
\* The transmit test does not occur on local systems.

**Testing your system burglary protection:** The System Test function should be part of your weekly testing and should be followed by placing the burglary devices in Zone Monitor mode. This allows you to open and then close each protected door and window while listening for the keypad to beep confirming its operation. See Zone Monitor.

## User Codes

**User Code Level:** Master only.

**Function:** Allows you to add or delete a user from the system or change their user code or authority level.

**User code characteristics:** There are three characteristics associated with each user code that define its capabilities within the system.

Characteristic	Example
User Number	12
User Code	3456
Authority Level	Master

**User Number** - Your system supports 16 users. Each user is numbered from 1 to 16. This number identifies them to the system and can be transmitted to the central station (if your system is monitored) when they arm or disarm the system.

**User Code** - Users also have a 4-digit user code they enter into the keypad when arming or disarming. This user code is kept secret from other users and is not transmitted to the central station when they arm or disarm.

**Note:** A User Code cannot begin with zero and cannot be left blank.

Users enter only their own user code when operating the system.

**Authority Level** - The user is also assigned a level of authority (Master or Standard) by the person administrating the system to determine the functions the user can access.

The table below lists system functions users are allowed to access based on the authority level assigned to their codes at the time they are added to the system.

User Menu Option	Standard	Master
Arm and Disarm	Y	Y
User Checkin	Y	Y
Zone Activity Check	Y	Y
Sensor Reset	Y	Y
Outputs On/Off	Y	Y
Bypass Zones	Y	Y
Zone Monitor	Y	Y
System Test	Y	Y
User Codes		Y
Set Time		Y
Display Events	Y	Y
Service Request?		Y

## Adding User codes

**User Code Level:** Master only.

1. Access the User Menu.
2. Press the COMMAND key until **USER CODES?** displays.
3. Press any Select key. The keypad displays **ADD DEL CHG**.
4. Select **ADD** to add a new user code.
5. At the **USER NUMBER:** – prompt, enter a user number and press COMMAND.
6. The display changes to **CODE NO:.** Enter the four-digit user code and press COMMAND.  
This is the number the user enters each time they arm, disarm, or make changes to the system.

**Note:** If the code you entered is already in use, or is a code used internally by the system, the keypad displays **ALREADY IN USE**. You must enter a different 4-digit user code.

7. The display changes to **MASTER? NO YES**. Select **YES** to make this a Master user level with the authority to access all User Menu functions.

Select **NO** to make this a Standard user level. The following options can then be selected:

### 7a. TEMP CODE NO YES.

Select **NO** to make this a permanent user code.

Select **YES** to make this a temporary code. The keypad displays **TEMP DAYS: - .** Enter the number of days (1 to 250) that the temporary use code can operate. Default is seven days. Temporary users are deleted from the system at 12:00 AM on the last day. You can delete a Temporary user code at any time before the programmed period ends.

### 7b. ARM ONLY NO YES.

Select **NO** to allow this user to arm and disarm the system and access all Standard level functions in the User Menu.

Select **YES** to restrict this user to arming only.

The Arm Only user code can bypass zones not in a normal condition at the time of arming.

8. After you complete your selections, the keypad displays **USER # ADDED**.
9. Press the Back Arrow key once to add another user or twice to exit the User Menu.

## Changing User codes

User Code Level: Master only.

1. Access the User Menu.
2. Press the COMMAND key until **USER CODES?** displays.
3. Press any Select key. The keypad displays **ADD DEL CHG**.
4. Select **CHG** to change a user code.
5. At the **USER NUMBER:** – prompt, enter the user number to change and press COMMAND.
6. The display changes to **CODE NO: \* \* \* \***. Enter the new user code.

If the code you entered is already in use, or is a code used internally by the system, the keypad displays **ALREADY IN USE**. You must enter a different 4-digit user code.

7. If you are changing a code other than your own, the keypad next displays **MASTER? NO YES**.

Select **YES** if you want this user to have a Master authority level.

Select **NO** if you want this user to have a Standard authority level. If you select **NO**, refer to item number 7 in the Adding User Codes section on the previous page.

**Note:** Changing a user code does not change the user number. User number 2 may have their user code changed from 1234 to 5678 but they are still user number 2.

## Deleting User codes

User Code Level: Master only.

1. Access the User Menu.
2. Press the COMMAND key until **USER CODES?** displays.
3. Press any Select key. The keypad displays **ADD DEL CHG**.
4. Select **DEL** to delete a user code from the system.
5. At the **USER NUMBER:** – prompt, enter the user number you want to delete and press COMMAND. The display changes to **USER # DELETED**.
6. The display then changes back to **USER NUMBER:** – for you to delete another user. Press the Back Arrow key twice to exit the User Menu.

## Ambush Code

Your system may be programmed to allow user number 1 to be an Ambush code. The Ambush code functions identically to other codes with the exception that it sends a silent alarm to the central station. This silent alarm alerts the operator to a duress situation at the premises and prompts immediate notification of the authorities.

Refer to the System Setup section of this guide to see if your system is programmed for Ambush. If your system is programmed for Ambush and you expect to use the Ambush function, the code you enter for user number 1 is the Ambush code.

## Date and Time

**User Code Level:** Master only.

**Function:** Allows you to change the current date and time displayed on the keypad and used by the system for Display Events.

### Setting the Date and Time

1. Access the User Menu.
2. Press **COMMAND** until **TIME?** displays. Press any Select key.
3. The keypad displays the current day and time. Press the **COMMAND** key to display the current date. Press the **COMMAND** key again to make any changes.
4. The keypad displays **TIME DAY DATE**. Select **TIME** to change the time. The keypad displays - : **AM PM**. Enter the current time and select **AM** or **PM**.
5. The display changes back to **TIME DAY DATE**.
6. Select **DAY** to change the day of the week. The keypad displays **SUN MON TUE WED**. If the current day does not display, press the **COMMAND** key. Select the correct day.
7. Select **DATE** to change the date. The keypad displays:
  - MONTH:** - Enter up to two digits for the month. Press **COMMAND**.
  - DAY:** - Enter up to two digits for the day. Press **COMMAND**.
  - YEAR:** - Enter up to two digits for the year. Press **COMMAND**.

The display returns to **TIME DAY DATE**. Press the Back Arrow key to exit the User Menu.

## Display Events

**User Code Level:** Master or Standard.

**Function:** Allows you to view up to 60 past events that occurred on your system from any keypad. Any event older than 45 days automatically clears from the system memory. Once the full 60 events are reached, any new event received clears the oldest event from the list.

Refer to Appendix A for detailed Display Events information.

## Request Service ?

**User Code Level:** Master only

**Function:** Allows you to send a Request for Service message to the central station when there is a problem on your system.

After the Display Events option in the keypad User Menu, the **REQUEST SERVICE?** option displays if a master code was used to enter the menu.

If your system is monitored by a central station and you need to send a Request for Service report to the central station, press any Select key while **REQUEST SERVICE?** displays. After the Request for Service report is sent, the keypad displays **REQUEST MADE** for four seconds.

If there is a problem with the telephone line connected to the system, you must contact our service department directly for assistance.

# System Setup

## System Setup Record

This System Setup section is provided to allow you to track the current status of programmable options on your Security Command™ system. If you make changes to the system, you should update the information contained on these pages.

Your system is monitored by a central station.

Yes  No

C/S Name: \_\_\_\_\_

Address: \_\_\_\_\_

City/State: \_\_\_\_\_

Emergency Phone: \_\_\_\_\_

Service Phone: \_\_\_\_\_

Service Manager: \_\_\_\_\_

Your system sends Opening and Closing reports.

Yes  No

Your system sends Zone Bypass reports.

Yes  No

Your system sends Ambush reports.

Yes  No

## Output Record

Your system has outputs that can be used for various functions. The list below identifies the output numbers and device names.

Output #	What it Controls
----------	------------------

_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____

Use the Output number in the User Menu when using the Outputs On Off option to manually operate the relays.

## Key Fob Button Programming

Enter the user name assigned to each key fob and the button action programmed for each button in the table below. Refer to the Introduction and Appendix B for more information.

Key Fob User Name	Button	Programmed Action
	TOP	
	BTM	
	LFT	
	RGT	
	TOP	
	BTM	
	LFT	
	RGT	
	TOP	
	BTM	
	LFT	
	RGT	
	TOP	
	BTM	
	LFT	
	RGT	
	TOP	
	BTM	
	LFT	
	RGT	
	TOP	
	BTM	
	LFT	
	RGT	

## User Codes

Your system provides 16 user codes you can program for individual users. As you add new users or change current user codes, you can keep track of their name, user number, and other information here in this section. Use a pencil to allow for changes in the table on the next page.

User	User Name	Level	Temp Code	Arm Only
1		M S	Y N	Y N
2		M S	Y N	Y N
3		M S	Y N	Y N
4		M S	Y N	Y N
5		M S	Y N	Y N
6		M S	Y N	Y N
7		M S	Y N	Y N
8		M S	Y N	Y N
9		M S	Y N	Y N
10		M S	Y N	Y N
11		M S	Y N	Y N
12		M S	Y N	Y N
13		M S	Y N	Y N
14		M S	Y N	Y N
15		M S	Y N	Y N
16		M S	Y N	Y N

**HOW TO FILL IN THIS TABLE**

**User** - The User Number of the person authorized to use the system.

**Level** - Master or Standard authority.

**Temp Code** - Is this code set to expire?

**Arm Only** - Is this user restricted to just arming?

Refer to the User Codes section of this User's Guide for additional information.

Circle Your Selections

# Appendix A

## About the Display Events Section

While in the Display Events function, use the COMMAND and Back Arrow keys to move forward or backward through the list of events. To view more information about each display, press the Select key as directed in the explanations below.

**Note:** This section shows the User's Guide Display Events items for both 16-character (single line) and 32-character keypad displays.

## Using the Display Events Function

1. Access the User Menu.
2. Press the COMMAND key until DISPLAY EVENTS? displays. Press any Select key.
3. The keypad displays **FIRST LAST**.

Select **FIRST** to view events starting from the oldest to the newest. If you select **FIRST**, use the COMMAND key to scroll up through the events displays.

Select **LAST** to view events starting from the newest to the oldest. If you select **LAST**, use the Back Arrow key to scroll down through the event displays.

Display Events allows you to view up to 60 past events that occurred on your system from any keypad. Any event older than 45 days automatically clears from the system memory. Once the full 60 events are reached, any new event received clears the oldest event from the list.

## Zone Activity Check Event Displays

This displays the date and time the Zone Activity Check was enabled or disabled.

### 32-Character Display

```
MSG 5:18P 10/17
ACT DISABLED
```

### Description

The Zone Activity Check was disabled at 5:18 PM on October 17.

Activity Check Event Types - There are three event types:

ACT DISABLED      ACT ENABLED      NO ZONE ACTIVITY

## Zone Bypass Event Displays

This displays the system zones bypassed.

### 32-Character Display

```
BYP 5:18P 10/17
EAST WINDOW
```

### Description

The east window zone was bypassed. Press any Select key for the zone number and user number.

Bypass Event Types - There are three event types:

BYP - Bypass      RST - Restore      FRC - Force Arm

**Note:** You may sometimes see the user as **SWG**. This is short for Swinger Bypass which is an automatic function that allows the system to bypass a zone.

## Zone Event Displays

This section displays alarms, troubles, and other events that could occur on your protection zones.

### 32-Character Display

```
ALR  10:23P  10/17
BASEMENT DOOR
```

### Description

An alarm occurred on October 17 at 10:23 PM. Press any Select key to see the zone number and zone type.

Zone Type - There are seven possible zone types you may see here.

**FIRE** - Fire      **PANC** - Panic      **BURG** - Burglary  
**EMRG** - Emergency      **SUPV** - Supervisory  
**AUX1** - Auxiliary 1      **AUX2** - Auxiliary 2

Event Types - There are seven event types you may see here:

**ALR** - Alarm      **TBL** - Trouble      **RST** - Restore  
**FLT** - Zone Fault      **SVC** - Service Smoke Detector  
**LOW** - Low battery      **MIS** - Missing wireless transmitter

**Note:** LOW and MIS are for wireless systems only.

## Arming and Disarming Event Displays

This displays any system areas arming or disarming.

### 32-Character Display

```
ARM  5:10P  10/17
WAREHOUSE
```

### Description

The warehouse area was armed at 5:10 PM on October 17. Press any Select key to display the area number and user number.

Arming Event Types - There are two event types you may see here:

**ARM** - User armed the system      **DIS** - User disarmed the system

## User Code Change Event Displays

This displays any user code additions, deletions, or changes.

### 32-Character Display

```
ADD  11:41A  10/17
US:19  BY    US:12
```

### Description

At 11:41 AM User 12 added user 19.

User Code Event Types - There are three event types you may see here:

**ADD** - User added      **DEL** - User deleted  
**CHG** - User code or authority level was changed.

## User Check-in Event Displays

This shows when a user selected the pager Check-in feature from the User Menu. See page 14 for more information.

### 32-Character Display

```
MSG 3:31P 10/17
CHECKIN USER: 16
```

### Description

User 16 selected the Check-in feature at 3:31 PM on October 17.

## Supervisory Event Displays

This displays the automatic test report date and time.

### 32-Character Display

```
MSG 11:58P 10/17
AUTO RECALL
```

### Description

The test report was sent to the central station at the date and time shown.

## System Monitor Event Displays

This displays any problems with the system AC power or battery.

### 32-Character Display

```
TBL 11:41A 10/17
AC POWER
```

### Description

An AC failure occurred on October 17 at 11:41 AM.

System Monitor Event Types - There are two event types:

TBL - Trouble RST - Restore

System Monitor Event Names - There are two system monitors:

AC POWER BATTERY

## Wireless Jamming Event Displays

This displays wireless interference events that have occurred.

### Keypad Display

```
ALR 11:41A 10/17
WIRELESS
```

### Description

The DMP wireless receiver detected interference on October 17 at 11:41 AM.

Wireless Jamming Event Types - There are three event types:

TBL - Trouble (an interference event occurred when the panel was disarmed)

ALR - Alarm (an interference event occurred when any area was armed)

RST - Restore

## Wireless Trouble Event Displays

This displays events when the wireless receiver was not communicating with the panel.

### Keypad Display

```
TBL 11:41A 10/17
WIRELESS
```

### Description

A DMP wireless receiver trouble occurred on October 17 at 11:41 AM.

Wireless Trouble Event Types - There are two event types:

TBL - Trouble

RST - Restore

## Appendix B

### DMP Wireless Description

If your system uses DMP Wireless devices and includes key fob(s), refer to the following information. The DMP Wireless section includes a brief discussion of key fob(s) and a drawing identifying the key fob buttons. Refer to the System Setup section of this guide to check the button programming list for key fob(s) connected to your system.

For best operation, allow the LED to turn on and then turn off before pressing another button. The key fob may not complete sending the signal for the button press if another button is pressed too soon.

### LED Status Operation

Depending on the programmed action of a key fob button, the Status LED lights to acknowledge a button press or to indicate the armed state of the system.

- When the button is programmed for Panic, Panic 2, Emergency, Emergency 2, Output, or Sensor Reset, a 1/2 second Green light displays to acknowledge the button press.
- When the button is programmed for Arm, Disarm, Toggle (Arm/Disarm), or Status, the system armed status is received by the key fob and the LED lights once as shown in the table below.

LED Color	Duration	Description
Red	2.0 Seconds	All System On
Green	2.0 Seconds	All System Off
Green/Red	2.0 Seconds	System On (Some Areas Armed)

When a button is pressed that is not programmed, the LED does not operate.

## Appendix C

### Easy Entry™ User's Guide


This section of the user's guide provides information on using the Security Command™ system Easy Entry™ access control capability. If your system is not currently using any access control devices, disregard this section. The keypad displays for All/Perimeter or Home/Away operation are dependent on how your keypad was programmed by your alarm dealer. Easy Entry™ is built into every Security Command™ system and can be accessed using Easy Entry™ keypads.

There are three different operating modes: Door Strike, Arming and Disarming, and Entry Delay. All of the examples below assume that your system requires a user code to arm and disarm the protection.

#### DOOR STRIKE

**Area and All/Perimeter Door Strike** – From the Status List, present your card to the reader. When the card is validated by the system, the Door Strike relay activates for 5 seconds during which time you can open the door. Once you open the door, you have 40 seconds to exit and close the door before the Zone 2 Soft-Shunt expires.


**Home/Away** systems only activate the Door Strike relay when arming and disarming.

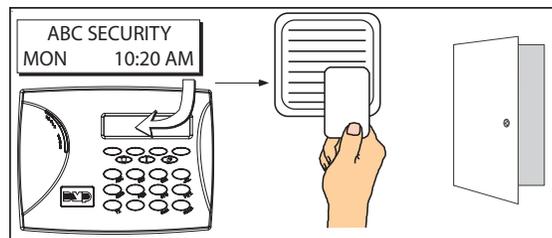

#### ARMING AND DISARMING AN ALL/PERIMETER SYSTEM

Press **COMMAND**. The keypad displays **PERIM ALL** (when arming) or **DISARM?**. Press the Select key under the desired option. The keypad displays **ENTER CODE: -**.

Present your card to the reader. Once the system validates the card, if you choose **PERIM**, only the perimeter arms. If you choose **ALL**, both areas arm. If programmed on a 32-character keypad, **ALL** is automatically chosen for you after a short delay. All armed areas disarm automatically.

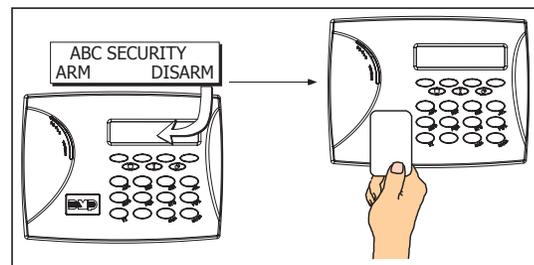


---

## ARMING AND DISARMING A HOME/AWAY SYSTEM

Present your card to the reader. If the system is armed, once the system validates the card, all areas are disarmed and the keypad displays **ALL SYSTEM OFF**.

If the system is disarmed when you present your card, once the system validates the card, **HOME SLEEP AWAY** displays. You can manually press the Select key under the desired option or after short time all areas automatically arm in the **AWAY** mode.

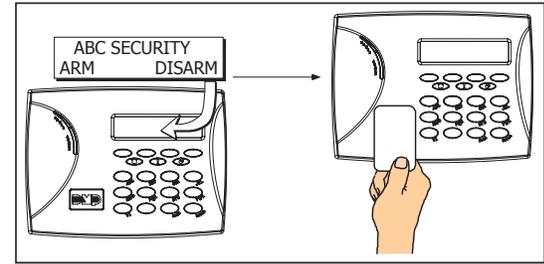


---

## ENTRY DELAY

**All Systems** - Once the protected door is opened and the entry delay starts, the keypad displays **ENTER CODE: -**. Present your card to the reader and, once validated, the system disarms all areas and activates the Door Strike relay. The top line of 32-character keypads displays the zone name. See Arming and Disarming above and on the previous page.

### Using the access reader for user menu access

You can also use a card reader to access the User Menu when **MENU? NO YES** displays.

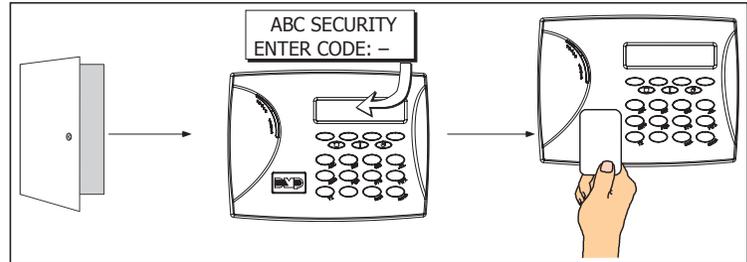

## Appendix D

### FA113 User's Guide

These instructions guide you through the XRSuper6 Command Processor system operation using the FA113 Wireless Keychain Remote. The FA113 uses the audible output capability of the Security Command™ keypad to sound confirmation tones. It is recommended that you use the FA113 within hearing distance of these keypads.

#### Arming a Home/Away or All/Perimeter System

1. Press the **ON** button once to arm the Perimeter burglary protection. The Security Command™ keypads emit a single beep to confirm arming. The Perimeter arms and all non-priority zones not in a normal condition are force armed.
2. After the single beep, press the **ON** button a second time to arm the Interior burglary protection. The Security Command™ keypads emit two beeps to confirm arming.
3. After the two beeps, pressing the **ON** button in Home/Sleep/Away systems arms in SLEEP MODE. When armed in sleep mode the zones assigned to the bedroom area are not armed. The Security Command™ keypads emit three beeps to confirm arming.

#### Disarming a Home/Away or All/Perimeter System

Press the **OFF** button once. The Security Command™ keypads emit a single 2-second beep to confirm disarming.

#### Using the ALERT Buttons

Pressing the two ALERT buttons simultaneously sends a Panic alarm to the panel. If your system is monitored by a central station, the proper authorities are notified of the alarm.

### Pager Direct™ User's Guide

For your reference a Pager Direct™ pocket guide is provided on the last page of this User's Guide.

Pager Direct uses your security system reporting capability to dial your pager number and send reports in much the same way as someone sending you a pager message would do. You can receive reports of alarms, troubles, or system armings and disarmings and know at a glance your system status.

The PagerDirect™ numeric message provides the account number, type of message, the zone affected, and the user.

Whenever the system sends a message to your pager, it will always send the account number first to identify itself. After the account, you may see:

#### Typical Zone Event Display Description

20002 001 NORTHWEST DOORS BURG \*ALARM\* SHIPPING

Account Zone Zone Name Zone Type Event Area Name

Zone Types - BURG, FIRE, SUPV (Supervisory), PANC (Panic), EMRG (Emergency), AUX1, or AUX2  
Events - ALARM or TRBL (TROUBLE)

#### Typical Arming/Disarming Display Description

20002 ARMED 0016 01 EAST WAREHOUSE

Account Event User # Area # Area Name

Events - ARMED or DISARMED

## User Checkin Display Description

20002 USER CHECKIN REPORT BY 0016

Account    Function Performed    User #

Functions - USER CHECKIN REPORT (An authorized user has selected Checkin from the User Menu)

## Typical System Event Display Description

20002 LATE TO CLOSE

Account    Event

Events - LATE TO CLOSE (The system has not been armed at its scheduled closing time)  
ALARM CANCELLED (An alarm has been cancelled by an authorized user)

## PhoneAccess™ User's Guide

For your reference a PhoneAccess™ pocket guide is provided on the last page of this User's Guide.

This exciting feature allows you to call your XR20 system from any outside touch-tone phone to arm and disarm protection areas or turn panel relay outputs on or off. Faulted zones force arm when the area arms.

### How it works

**Note:** If your telephone system shares the phone line with a fax machine or answering machine, call and let the phone ring once, then hang up, and redial. The panel seizes the phone line so you can check system status and arm or disarm the system.

1. From a touch tone phone, call the system phone number. The XRSuper6 answers and sounds a short ready tone.
2. You now have eight seconds to enter a valid *Master* user code. If the panel accepts the user code, you hear one or more beeps indicating the system current armed status.

The following table identifies the beeps and what they represent.

If	You will hear
All areas are armed	3 short beeps
Area 1 (Perimeter) is armed	1 short beep
Any area is armed	2 short beeps
All areas are disarmed	1 long beep

**Note:** You can also find out the system armed status by pressing the \* key at any time.

3. If the user code is not accepted by the panel, you hear four short beeps. Check the user code and try again. After three unsuccessful attempts to enter the code, the panel locks out PhoneAccess™ until a valid user code is entered at a keypad.
4. Once the user code is accepted by the panel and the armed status is given, you can enter arming and disarming commands.

Press	For this action	You will hear
# then 1	Arm all	3 short beeps
# then 2	Arm Perimeter	1 short beep
# then 3	Arm Perimeter/Interior	2 short beeps
# then 0	Disarm all areas	1 long beep
#, 5, 4, 0, n*	Toggles the output	1 short beep = on 1 long beep = off 4 short beeps = restricted

\* Use outputs 1, 2, 3 or 4 in place of n. Enter output descriptions below.

**Note:** Zones in a faulted condition are force armed when the area arms.

1. \_\_\_\_\_
2. \_\_\_\_\_
3. \_\_\_\_\_
4. \_\_\_\_\_

## Common Keypad Displays

Listed below are several keypad messages you may see on the display. Follow the instructions in the Possible Solutions column to correct the problem. In many cases, you need to call a service person to correct the problem. Displays not discussed here indicate your service representative should be called.

Message	Tone at Keypad	Meaning	Possible Solutions
INVALID CODE	No	The user code you entered is not recognized by the system.	Check the user code and try again.
AC TROUBLE	Yes	The system is not getting proper power.	Contact your service person if other electrical devices in your home are working.
BATTERY TROUBLE	Yes	The battery is either low or missing.	Contact your service person.
SYSTEM TROUBLE or SERVICE REQUIRED	Yes	There is a problem with one or more components in the system.	Contact your service person.
SYSTEM BUSY	No	The system is performing another task with a higher priority.	Wait a few moments for the system to complete the task. Contact your service person if the problem remains.
4-WIRE BUS TROUBLE	No	There is not a supervised device on the bus.	Contact your service person.
		The voltage is low or there is an open yellow wire.	
		Two devices share the same address.	
TRANSMIT FAIL	Yes	The panel has attempted to communicate with the central station ten times and has not succeeded.	Make sure your telephone line is working properly. Contact your service person if the problem remains.
NON-POLLED ADDRESS	770 Keypad	Keypad is set to an invalid address.	Contact your service person.
WIRELESS TROUBLE	Yes	The panel is unable to communicate with the wireless receiver.	Verify the receiver is properly connected to the panel. Verify the correct House Code is programmed in System Options.
		The wireless receiver is missing.	

# Index

## Symbols

- 2-Button Panic Keys 5
- 24-Hour Zone 9
- 7/0 Panic Function 5

## A

- Alarm Cancel 14, 16
- ALARM display 8
- Alarm Silence Inside Front Cover, 6, 14, 16
- Alarm Verify 14, 16
- All/Perimeter System 12
  - Alarm Silence Inside Front Cover
  - Arming 12
  - Disarming 14
  - Instant Arming 13
  - Shortcut Keys 13, 17
- Ambush Codes 25
- Aqualite™ Keypad 3
  - 7/0 Panic Function 5
  - LEDs 3
  - Panic Keys 5
- Area System
  - Alarm Silence Inside Front Cover
- Armed LED 3
- Arming 11
  - All/Perimeter 12, 34
  - Home/Away 14, 35
  - Instant 13
  - Key Fob 12
  - Shortcut Keys 13, 15, 17
- Arming/Disarming Event Display 31

## B

- Backlighting 6

Index

- Back Arrow (←) Key 4
- Bypassing zones 11, 15, 18, 21

## C

- Cancel Alarm Inside Front Cover, 14, 16
- Central Station Monitoring 10
- Changing User Codes 25
- Check-in Report to Pager 17, 19
- Clear Touch™ Keypad 4
  - Panic Icons 5
  - Power/Armed LED 4
- COMMAND (CMD) Key 4
- Common Keypad Displays 38

## D

- Data Entry Keys 4
- Date and Time 26
- Disarming
  - All/Perimeter 13, 34
  - During an Alarm 14, 16
  - Home/Away 16, 35
  - Key Fob 12
- Display Brightness 6
- Display Events 26, 30
  - Arming and Disarming 31
  - Supervisory 32
  - System Monitor 32
  - User Events 32
  - Wireless Events 32
  - Zone Events 30, 32
- DMP Wireless 33

## E

- Easy Entry™ User's Guide 34
- Easy Exit™ Shortcut Key 16, 17

- Emergency Evacuation Plans 2
- ENTER CODE display 8
- Entry Delay 35
- Entry or Exit Zone 9
- Event Displays 30
  - Arming and Disarming 31
  - Supervisory 32
  - System Monitor 32
  - User Check-In 32
  - User Code Change 31
  - Wireless Jamming 32
  - Wireless Trouble 32
  - Zone Activity check 30
  - Zone Bypass 30
  - Zone Events 31
- Exit Error 10

## F

- FA113 User's Guide 36
- False Alarms 1

## H

- Home/Away System 14
  - Alarm Silence Inside Front Cover
  - Arming 15
  - Disarming 15
  - Easy Exit™ Shortcut Key 16
  - Shortcut Keys 15, 17
- How Your System Operates 11

## I

- Instant Arming 11
- Instant Zone 9

## **K**

- Keypad
  - 2-Button Panic Keys 5
  - 7/0 Panic Function 5
  - ALARM 8
  - Aqualite™ 3
  - Backlighting 6
  - Back Arrow (<—) Key 4
  - Clear Touch™ 3, 4
  - COMMAND (CMD) key 4
  - Data Entry Keys 4
  - LEDs 3, 4
  - Security Command™ 3
  - Select Areas 4
  - Select Keys 3
  - Shortcut Keys 16
  - SYSTEM TROUBLE 9
  - Thinline™ 3
  - Tones 6
  - Types 3
  - User Menu 1
  - User Options 6
  - Volume 6
  - Wireless Displays 8
- Key Fob 7, 28, 33
  - Arming 12
  - Button Layout 7
  - Button Programming 28
  - Disarming 12
  - LED Operation 33
  - Status Table 33
  - User Record 28

## **L**

- LED Operation 3, 4, 33

## **N**

- Numeric Paging 41

## **O**

- Outputs On Off 20

## **P**

- Pager Direct™ 36, 41
- PhoneAccess™ 37, 41
- Power LED 3

## **R**

- Request Service? 26
- Resetting the Sensors 17, 20

## **S**

- Security Command™ Keypad 1, 3
  - 7/0 Panic Function 5
  - Displays 8
  - LEDs 3
  - Panic Keys 5
  - Tones 6
- Security System Terms 9
- Select Areas 4
- Select Keys 3
- Sensor Reset 20
- Setting the Date and Time 26
- Shortcut Keys 13, 15, 16, 19, 20, 21
  - Arming Function 13, 15, 17
  - Check-in (Latch Key) Report Function 17, 19
  - Easy Exit™ Function 16, 17
  - Monitor (Chime) Function 17, 21
  - Sensor (Fire) Reset Function 17, 20
- Silencing an Alarm Inside Front Cover, 7
- Status List 10
- Supervisory Event Display 32

- System Monitor Even Display 32
- System Ready/System Not Ready 13, 14
- System Setup Record 27
- System Test 22

## **T**

- Test Your System Weekly 1
- Thinline™ Keypad 3
  - 7/0 Panic Function 5
  - LEDs 3
  - Panic Keys 5
- TROUBLE display 9
- Trouble Tone Response Inside Front Cover, 7

## **U**

- User Check-In Event Display 32
- User Codes 23
  - Ambush Codes 25
  - Authority Levels 23
  - Change Event Display 31
  - Changing 25
  - Deleting 25
  - Table 29
- User Menu Options 18, 23

## **V**

- Verify Alarm Inside Front Cover, 14, 16

## **W**

- Wireless 7, 33
  - Event Displays 32

## **Z**

- Zone 9
- Zone Activity Check 19
- Zone Event Display 31

# Quick Reference Wallet Cards

## PhoneAccess™ Quick Commands

Press	For this action	You will hear
# then 1	Arm all	3 short beeps
# then 2	Arm Perimeter	1 short beep
# then 3	Arm Perimeter/Interior	2 short beeps
# then 0	Disarm all areas	1 long beep
#, 5, 4, 0, n*	Toggles the output	1 short beep = on 1 long beep = off 4 short beeps = restricted

**Note:** Zones in a faulted condition are force armed when the area arms.

- \* Use outputs 1, 2, 3, or 4 in place of n. Enter output descriptions below.
1. \_\_\_\_\_ 3. \_\_\_\_\_  
 2. \_\_\_\_\_ 4. \_\_\_\_\_

## PhoneAccess™ Quick Commands

Press	For this action	You will hear
# then 1	Arm all	3 short beeps
# then 2	Arm Perimeter	1 short beep
# then 3	Arm Perimeter/Interior	2 short beeps
# then 0	Disarm all areas	1 long beep
#, 5, 4, 0, n*	Toggles the output	1 short beep = on 1 long beep = off 4 short beeps = restricted

**Note:** Zones in a faulted condition are force armed when the area arms.

- \* Use outputs 1, 2, 3, or 4 in place of n. Enter output descriptions below.
1. \_\_\_\_\_ 3. \_\_\_\_\_  
 2. \_\_\_\_\_ 4. \_\_\_\_\_

## Area Names

Your system areas are listed below:

- | Area and Name       | Notes |
|---------------------|-------|
| 1. PERIMETER (HOME) | _____ |
| 2. INTERIOR (AWAY)  | _____ |
| 3. BEDROOMS (SLEEP) | _____ |

Service Department Phone: \_\_\_\_\_

Emergency Phone: \_\_\_\_\_

Central Station Phone: \_\_\_\_\_


## Pager Direct™



**Security Command™  
 Numeric Paging**

Cut along dotted lines.

## Numeric Pager Display

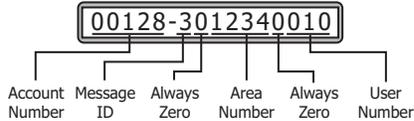

### Account Number

This number is programmed into your Security Command™ system as an identifier. Whenever the system sends a message to your pager, it always sends the account number first to identify itself.

### Message ID

This is always a single digit that describes the message.

- 1 = Zone Alarm
- 2 = Zone Trouble
- 3 = Area(s) Arming
- 4 = Area(s) Disarming
- 6 = User Check-in
- 7 = Local Message

### Zone or Area Number

If this message is for a zone, the 1 to 2-digit zone number displays.

If this message is for areas being armed or disarmed, the area numbers display in sequential order. Example: 1 2.

### User Number

This is a 3-digit number that identifies the user.

1. Call the panel phone number. The panel answers and sounds one short tone.
2. Enter your code within eight seconds. One beep means the code is good. Four short beeps means enter it again. You have three tries.
3. You have 30 seconds to enter the first command (see other side) and 30 seconds for each additional command.

If	You will hear
All areas are armed	3 short beeps
Area 1 (Perimeter) is armed	1 short beep
Any area is armed	2 short beeps
All areas are disarmed	1 long beep

1. Call the panel phone number. The panel answers and sounds one short tone.
2. Enter your code within eight seconds. One beep means the code is good. Four short beeps means enter it again. You have three tries.
3. You have 30 seconds to enter the first command (see other side) and 30 seconds for each additional command.

If	You will hear
All areas are armed	3 short beeps
Area 1 (Perimeter) is armed	1 short beep
Any area is armed	2 short beeps
All areas are disarmed	1 long beep

Cut along dotted lines.

This page intentionally left blank.

